



Behringer
Swivel Plate
BEHSWPLATE

Housing Range: Group 3 thru 7A

Hardware Material: 304 Stainless; 316 Stainless; Carbon Steel

Installation: Typically used in stacking assembly- Replace the COP at the lowest point of upper assembly with a SWV. Then attach 3/8-16 threaded rod as a spacer and connect to HAP on lower assembly. Tighten assembly nuts once the direction of each assembly is fixed.

Contact Us: **973-948-0226** or **www.behringersystems.com**